


User guide for setup IR code on Vera2 gateway


- 1) Click “Setup” icon on the upper right of the device.




- 2) After you click the “Setup” icon, you can see below window.

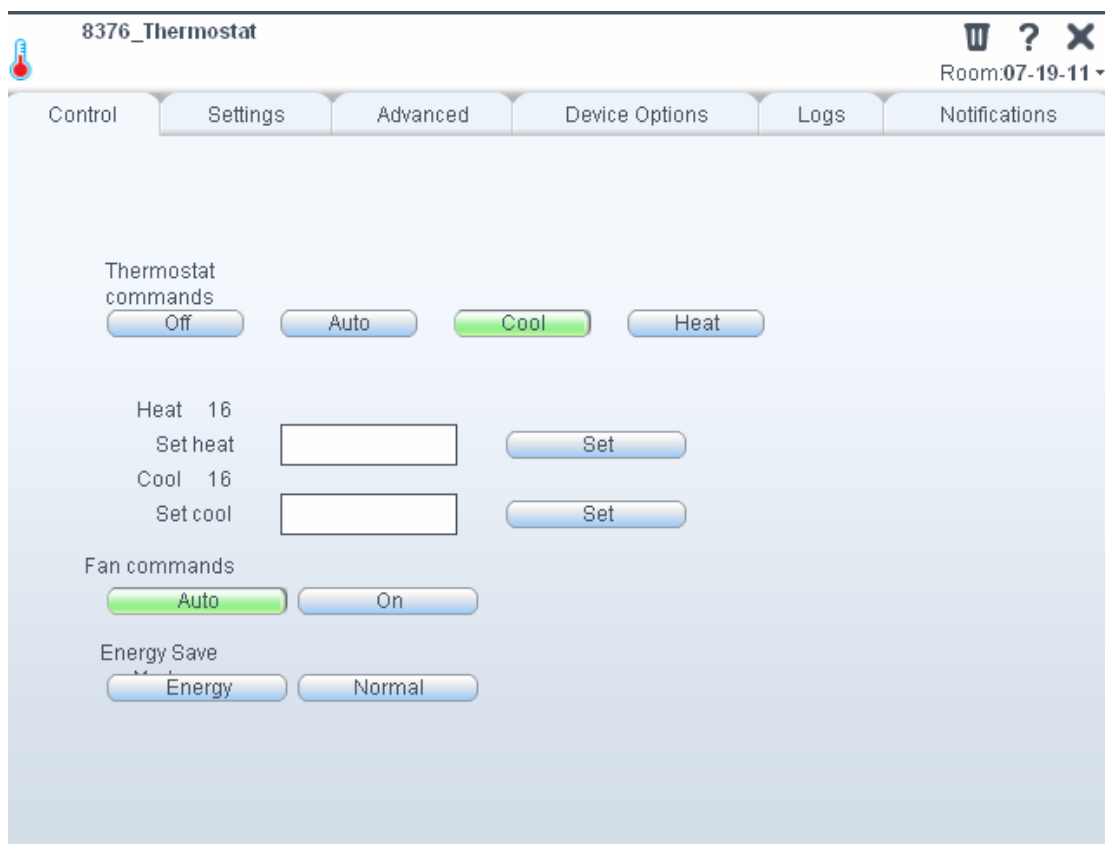

- 3) Choose “Device Options” tab
 - a) On “Variable” blank, input “27” (Parameter defined by Remotec for set code operation)
 - b) On “DataSize” blank, select “2 byte dec”
 - c) On “Desired Value” blank, enter the code number.
 - i. Refer to codelist e.g. Mitsubishi 035
 - ii. then input “035” (as shown below)

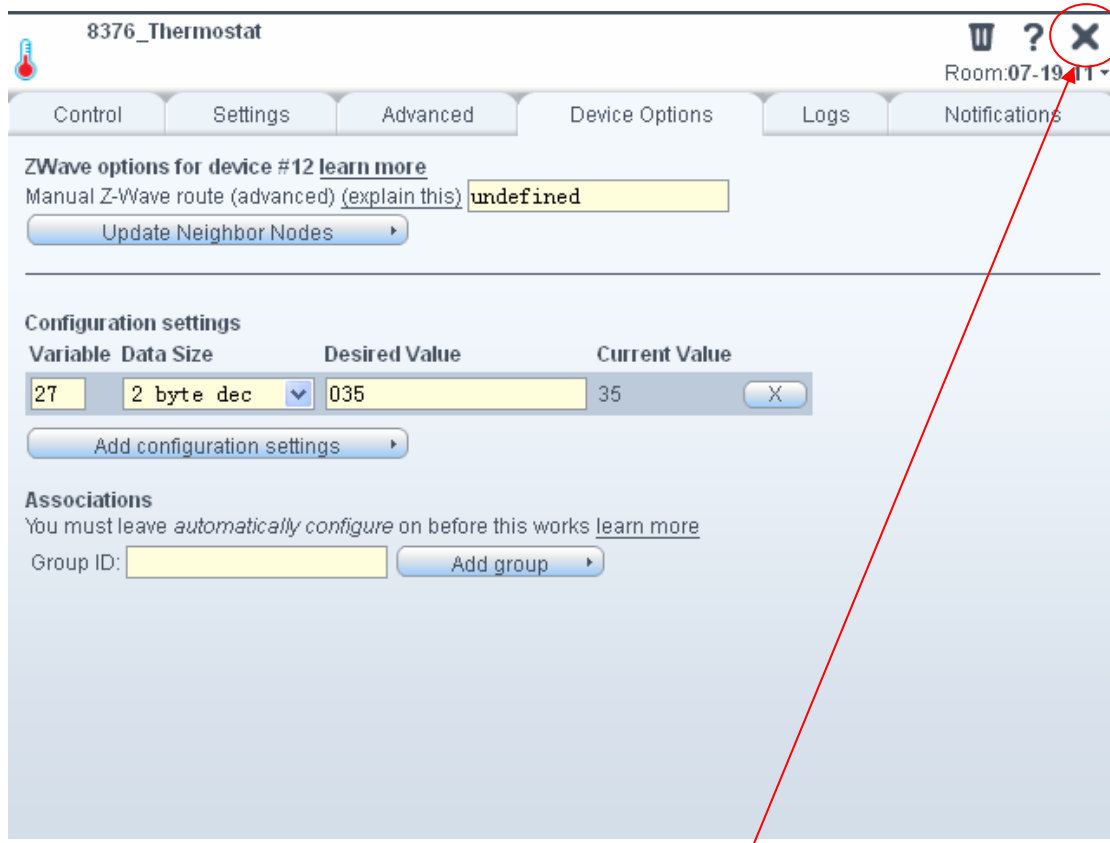

- 4) Click the “X” on upper right hand of this window to exit
- 5) Click “Save” to confirm this setting.

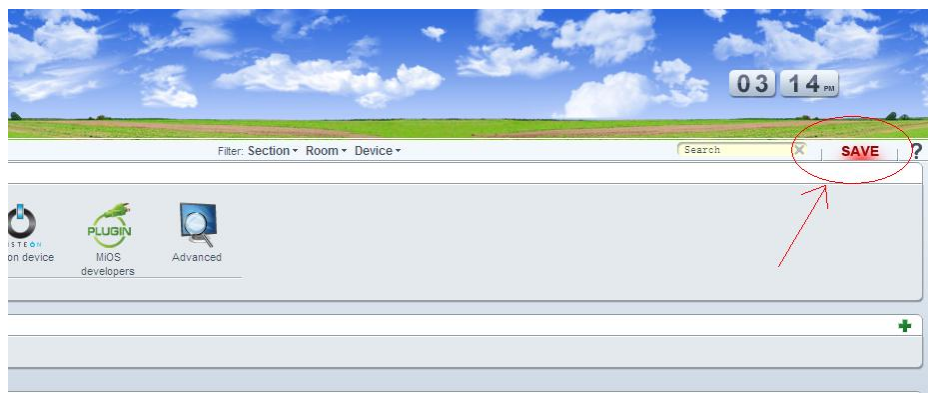

6) Click “Continue”

